

Parameterisable spring-return actuator with emergency control function for adjusting dampers in technical building installations

- Air damper size up to approx. 2 m<sup>2</sup>
- Nominal torque 10 Nm
- Nominal voltage AC/DC 24 V
- Control modulating DC (0)2...10 V Variable
- Position feedback DC 2...10 V Variable



Technical data		
Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	7 W
	Power consumption in rest position	3.5 W
	Power consumption for wire sizing	9.5 VA
	Connection supply / control	Cable 1 m, 4 x 0.75 mm <sup>2</sup>
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	Min. 10 Nm
	Torque spring return	Min. 10 Nm
	Positioning signal Y	DC 010 V
	Positioning signal Y note	Input impedance 100 kΩ
	Control signal Y variable	Open-close
		3-point (AC only)
		Modulating (DC 032 V)
	Operating range Y	DC 210 V
	Operating range Y variable	Start point DC 0.530 V
	Position feedback U	End point DC 2.532 V DC 210 V
	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	Start point DC 0.58 V
	1 Osition recubació o variable	End point DC 2.510 V
	Position accuracy	±5%
	Direction of motion motor	Selectable with switch L / R
	Direction of motion note	Y = 0 V: At switch position L for ccw rotation or R for cw rotation, respectively
	Direction of motion variable	Electronically reversible
	Direction of motion emergency control function	Selectable by mounting L / R
	Manual override	By means of hand crank and locking switch
	Angle of rotation	Max. 95°
	Angle of rotation note	adjustable starting at 33% in 2.5% steps (with mechanical end stop)
	Running time motor	150 s / 90°
	Motor running time variable	40150 s
	Running time emergency control position	
	Running time emergency setting position note	
	Adaption setting range	manual
	Adaption setting range variable	No action
		Adaption when switched on Adaption after pushing the gear disengagement button
	Override control	MAX (maximum position) = 100% MIN (minimum position) = 0%
		ZS (intermediate position, AC only) = 50%
	Override control variable	MAX = (MIN + 32%)100% MIN = 0%(MAX - 32%) ZS = MINMAX
	Sound nower level meter	40 dR(A)

Sound power level motor

40 dB(A)

**Technical data** 

# Spring-return actuator, parameterisable, modulating, AC/DC 24 V, 10 Nm



#### **Functional data** Spindle driver Universal spindle clamp 10...25.4 mm Position indication Mechanical Min. 60,000 emergency positions Service life Safety Protection class IEC/EN III Safety extra-low voltage Protection class UL **UL Class 2 Supply** Degree of protection IEC/EN IP54 NEMA 2, UL Enclosure Type 2 Degree of protection NEMA/UL **EMC** CE according to 2014/30/EU

Certification IEC/EN IEC/EN 60730-1 and IEC/EN 60730-2-14 Certification UL cULus according to UL 60730-1A, UL 60730-2-14 and CAN/CSA E60730-1:02 Mode of operation Type 1.AA 0.8 kV Rated impulse voltage supply / control Control pollution degree 3 -30...50°C Ambient temperature Non-operating temperature -40...80°C Ambient humidity 95% r.h., non-condensing Maintenance Maintenance-free

Weight

Weight

#### Safety notes



• The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.

2.2 kg

- Outdoor application: only possible in case that no (sea)water, snow, ice, insolation
  or aggressive gases interfere directly with the actuator and that is ensured that the
  ambient conditions remain at any time within the thresholds according to the data
  sheet
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation site and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed
  of as household refuse. All locally valid regulations and requirements must be
  observed.

#### **Product features**

Mode of operation

The actuator moves the damper to the operating position at the same time as tensioning the return spring. The damper is turned back to the emergency position by spring force when the supply voltage is interrupted.

The actuator is connected with a standard modulating signal of DC 0...10V and drives to the position defined by the positioning signal. Measuring voltage U serves for the electrical display of the damper position 0...100% and as slave control signal for other actuators.

Parameterisable actuators

The factory settings cover the most common applications. Single parameters can be modified with the Belimo Service Tools MFT-P or ZTH EU.

Simple direct mounting

Simple direct mounting on the damper spindle with an universal spindle clamp, supplied with an anti-rotation device to prevent the actuator from rotating.

Manual override

By using the hand crank the damper can be actuated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

# Spring-return actuator, parameterisable, modulating, AC/DC 24 V, 10 Nm



#### **Product features**

#### Home position

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out a synchronisation. The synchronisation is in the home position (0%)

The actuator then moves into the position defined by the positioning signal.

#### Adaption and synchronisation

An adaption can be triggered manually by pressing the "Adaption" button or with the PC-Tool. Both mechanical end stops are detected during the adaption (entire setting range). Automatic synchronisation after actuating the hand crank is programmed. The synchronisation is in the home position (0%).

The actuator then moves into the position defined by the positioning signal. A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

#### **Accessories**

		_
	Description	Туре
Electrical accessories	Auxiliary switch, 2 x SPDT	S2A-F
	Feedback potentiometer, 200 Ohm, incl. installation accessories	P200A-F
	Feedback potentiometer 1 kOhm, incl. installation accessories	P1000A-F
	Signal converter voltage/current, supply AC/DC 24V	Z-UIC
	Digital position indicator for front-panel mounting, 099%, front mass 72 x 72 mm	ZAD24
	Range controller for wall mounting, adjustable electron. Min./max. angle of rotation limitation	SBG24
	Positioner for wall mounting, range 0100%	SGA24
	Positioner in a conduit box, range 0100%	SGE24
	Positioner for front-panel mounting, range 0100%	SGF24
	Positioner for wall mounting, range 0100%	CRP24-B1
	Connecting cable 5 m, A+B: RJ12 6/6, To ZTH/ZIP-USB-MP	ZK1-GEN
	Connection cable 5 m, A: RJ11 6/4, B: Free wire end, To ZTH/ZIP-USB-MP	ZK2-GEN
	Description	Туре
Mechanical accessories	Shaft extension 250 mm, for damper spindles Ø 825 mm	AV8-25
	End stop indicator for NFA / SFA	IND-AFB
	Spindle clamp set for NFA/SFA (1", 3/4", 1/2")	K7-2
	Straight ball joint with M8, suitable for damper crank arms KH8	KG10A
	Angled ball joint with M8, suitable for damper crank arms KH8	KG8
	Damper crank arm, for damper spindles	KH8
	Damper crank arm for NFA / SFA, for 3/4" spindles	KH-AFB
	Form fit insert 10x10 mm, for spring return actuators NG	ZF10-NSA-F
	Form fit insert 12x12 mm, for spring return actuators NG	ZF12-NSA-F
	Form fit insert 16x16 mm, for spring return actuators NG	ZF16-NSA-F
	Damper crank arm, for spring return actuators NG	ZG-AFB
	Base plate extensions for NFA/SFA	Z-SF
	Description	Туре
Service Tools	Service Tool, for MF/MP/Modbus/LonWorks actuators and VAV-Controller	ZTH EU
	Belimo PC-Tool, software for adjustments and diagnostics	MFT-P
	Adapter to Service Tool ZTH	MFT-C



#### **Electrical installation**




#### **Notes**

- · Connection via safety isolating transformer.
- Parallel connection of other actuators possible. Observe the performance data.

#### Wiring diagrams

AC/DC 24 V, modulating

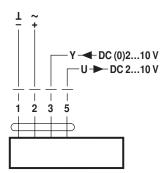


#### Cable colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange


#### **Functions**

# Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

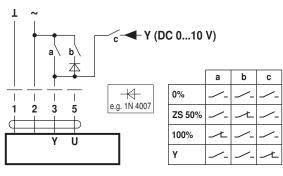



Override control with AC 24 V with rotary switch

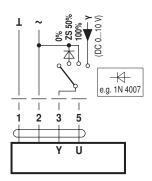


Remote control 0...100% with positioner SG..


Minimum limit with positioner SG..

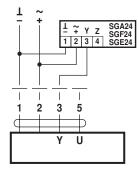

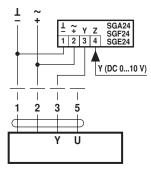


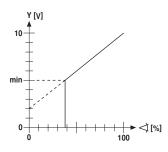

Follow-up control (position-dependent)

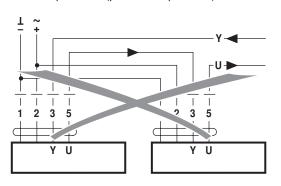

Position indication

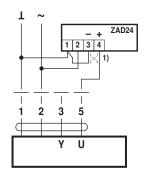


(1) Adapting the direction of rotation




#### **Functions**

Control with 4...20 mA via external resistor

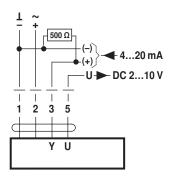

Functional check

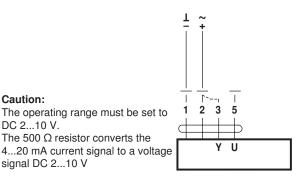

#### **Procedure**

- 1. Connect 24V to connections 1 and 2
- 2. Disconnect connection 3: – with direction of rotation 0: Actuator rotates to the left
- with direction of rotation 1: Actuator rotates to the right
- 3. Short-circuit connections 2 and 3: Actuator runs in opposite direction

#### Functions for actuators with specific parameters (Parametrisation with PC-Tool necessary)

The 500  $\Omega$  resistor converts the


Override control and limiting with AC 24 V with relay contacts


Caution:

DC 2...10 V.

signal DC 2...10 V

Override control and limiting with AC 24 V with rotary switch

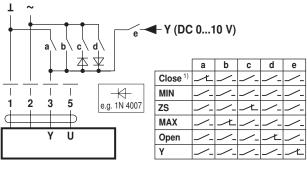


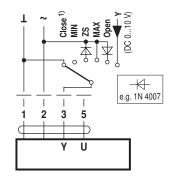


1) Caution: This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.


Control open-close

Control 3-point

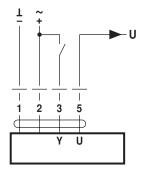

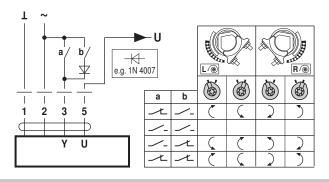

### Operating controls and indicators

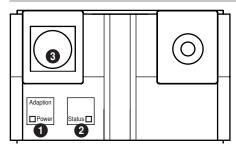

#### Membrane key and LED display green

No power supply or malfunction

On: In operation

Press button: Triggers angle of rotation adaptation, followed by standard mode

### 2 Membrane key and LED display yellow

Off: Standard mode

On: Adaptation and synchronising process active

Press button: No function

#### 3 Service plug

For connecting parameterisation and service tools

#### Operating elements


The manual override, locking switch and direction of rotation switch elements are available on both sides



#### Service


#### **Service Tools connection**

The actuator can be parameterised by ZTH EU via the service socket. For an extended parameterisation the PC tool can be connected.

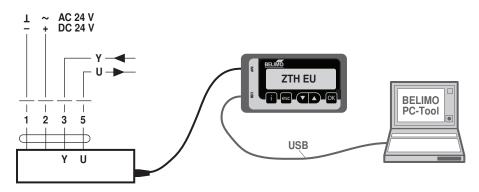


# **Dimensions [mm]**

### Spindle length

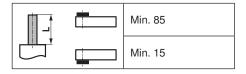

#### Clamping range

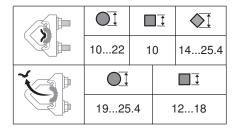

#### **Dimensional drawings**

